


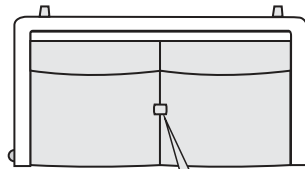
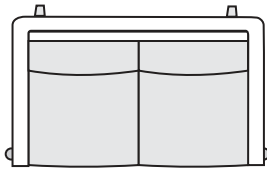
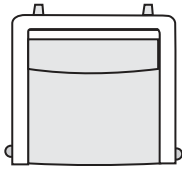
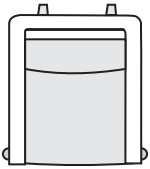
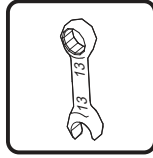
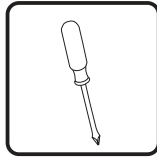


Instrukcja montażu
Assembling Instruction


Montageanleitung
l'instruction de montage

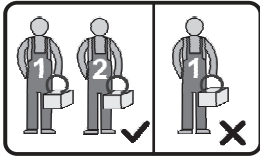


A1 No 159

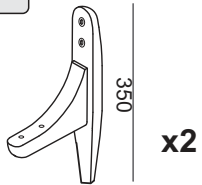

B1 No 159A

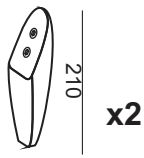

C1 No 159D

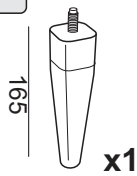

SD M8x75

D x8

8,5x22

E x8

M8


F x8

US 5x60

G x4

φ15x2

H x5

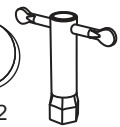


I



φ45x3

J x1



1

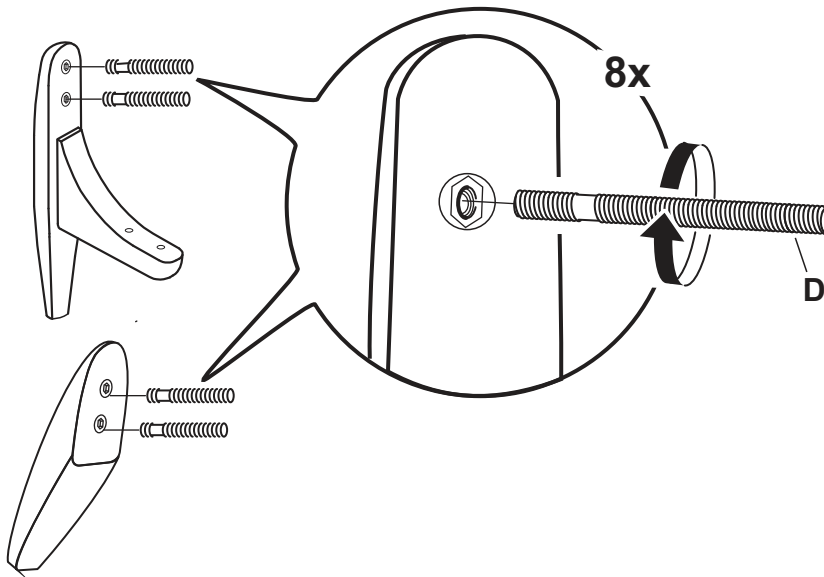





A1

+


B1

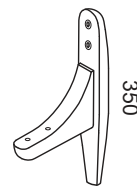


2

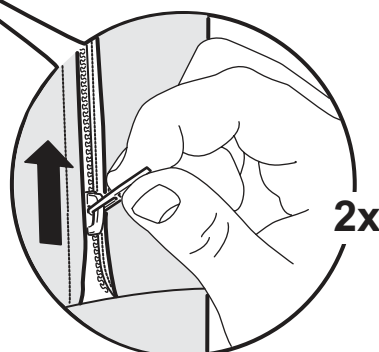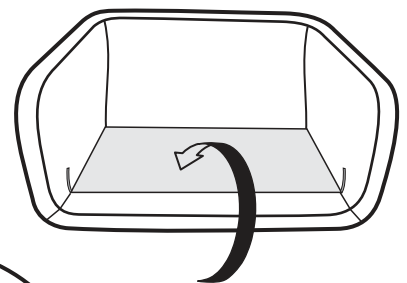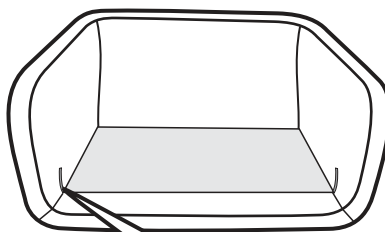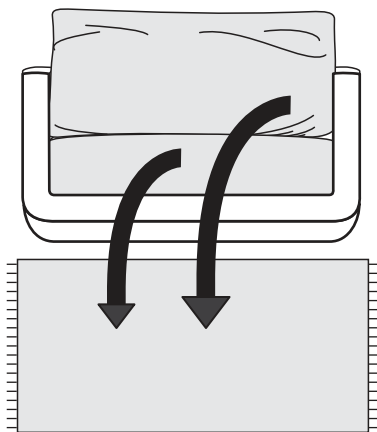

3


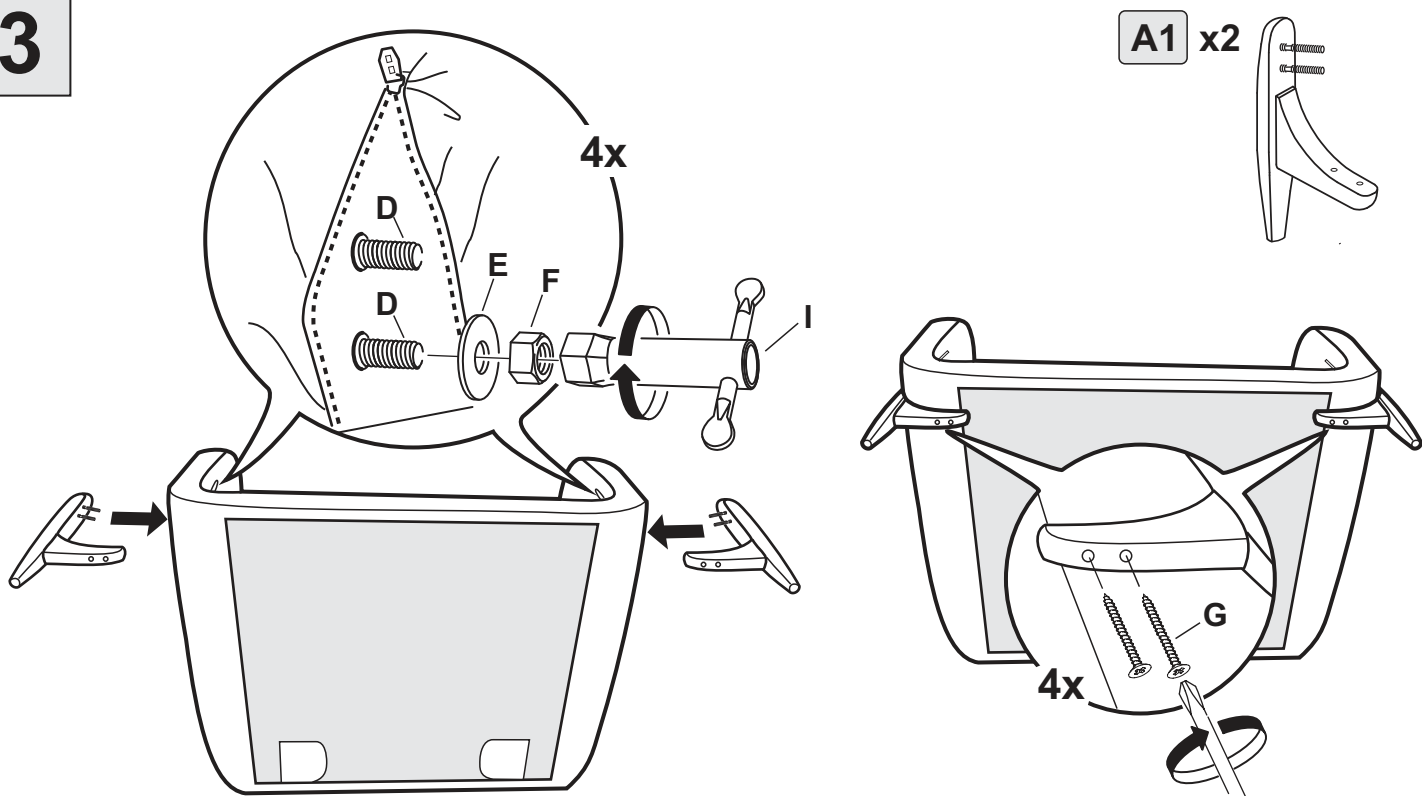


4

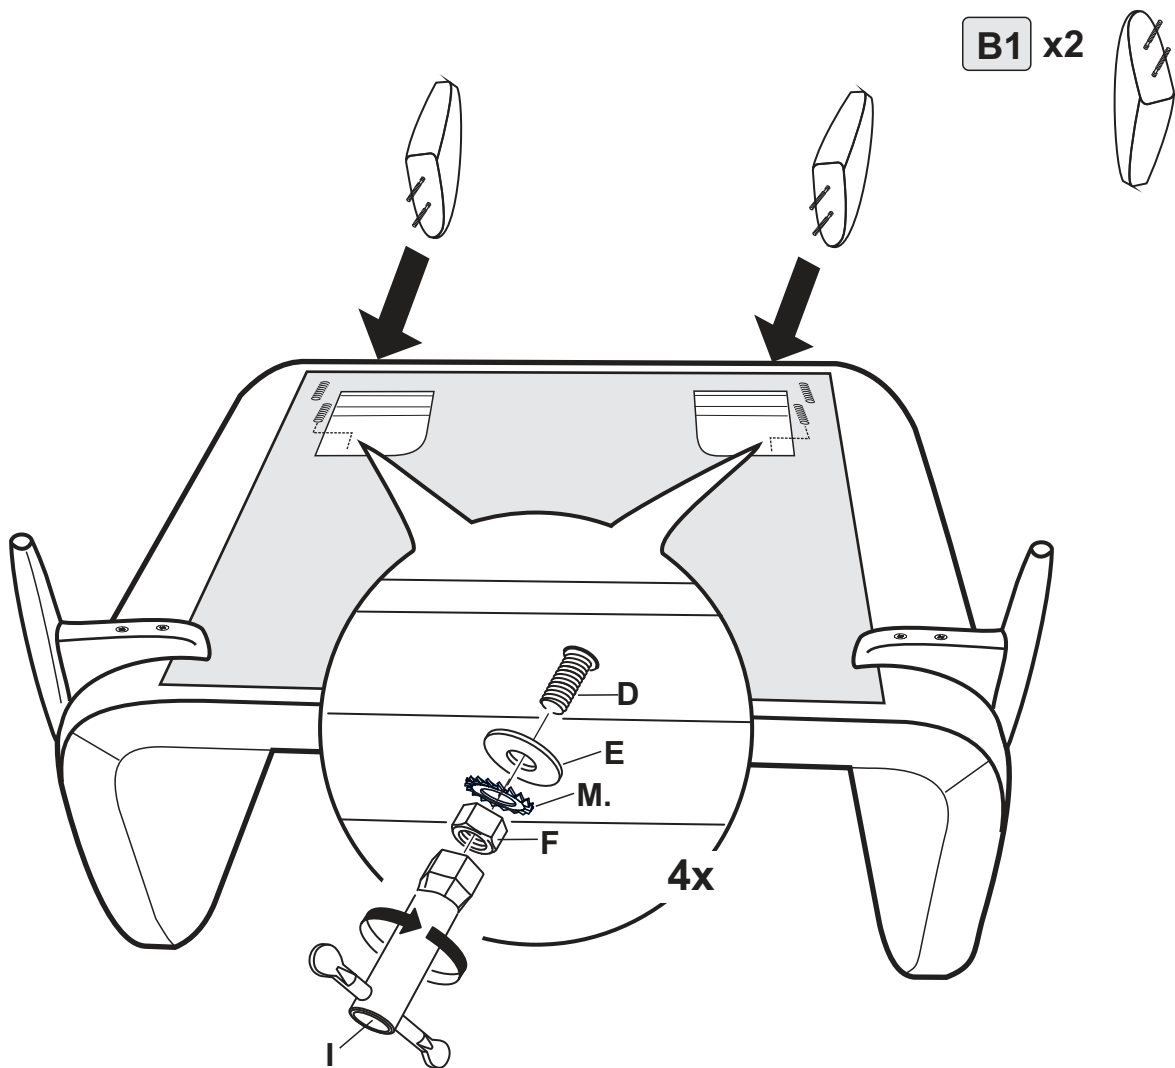

2


5

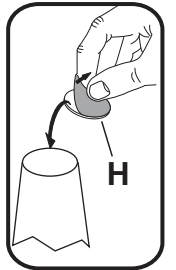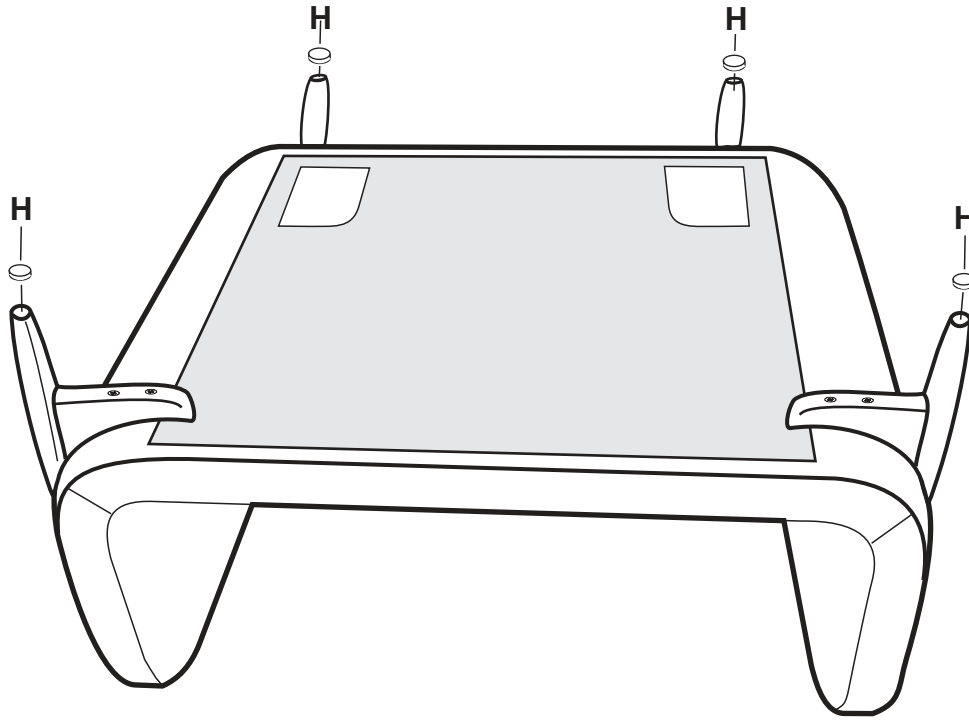


A1 No 159 x2	B1 No 159A x3	D1 No 159B L+R	C1 No 159D x1
----------------------------	-----------------------------	------------------------------	-----------------------------

SD M8x75	8,5x22	M8	US 5x60
D x10	E x10	F x10	G x4




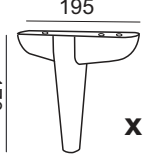


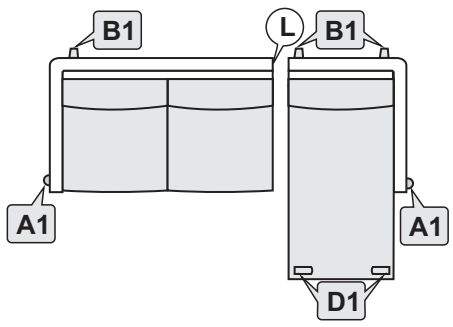

6

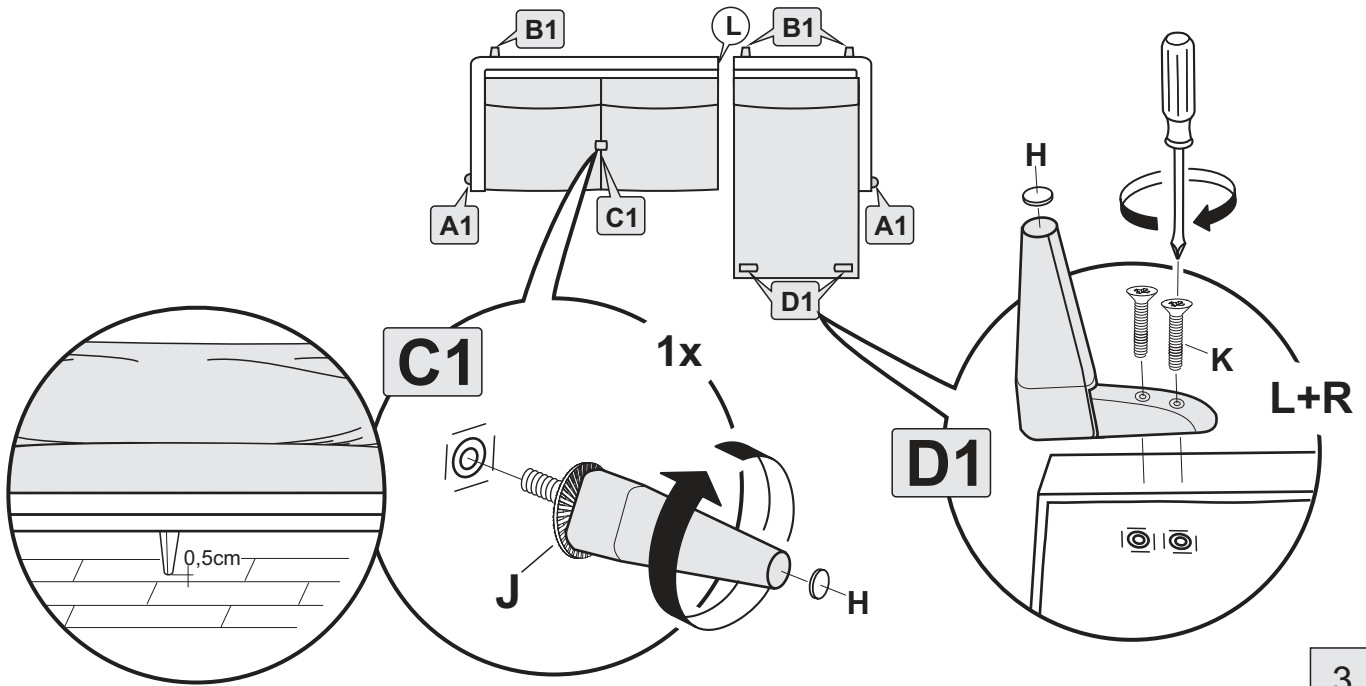


φ15x2		φ45x3	WS M6 x 35
H x7/8	I	J x1	K x4
L-80xφ 10	8x15x0,8		
L x1	M x6		

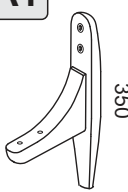
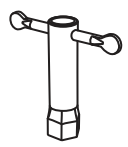






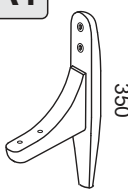

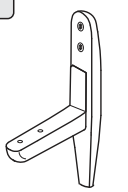




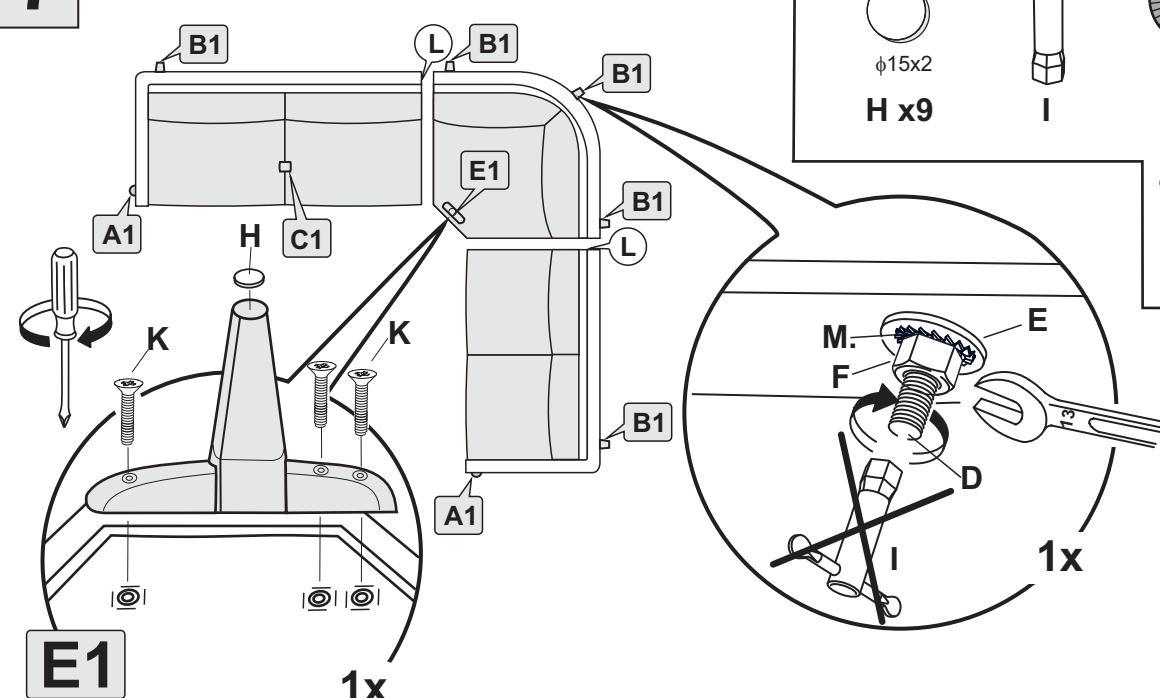


3

A1 No 159  x2	B1 No 159A  x5	C1 No 159D  x1	E1 No 159C  x1	 SD M8x75 D x14	 8,5x22 E x14	 M8 F x14	 US 5x60 G x4
--	--	--	--	--	---	---	---


7





 φ15x2 H x9	 I	 φ45x3 J x1	 WS M6 x 35 K x3
 L-80xφ 10 L x2	 8x15x0,8 M x10		

A1 No 159  x1	D1 No 159B  L+R	F1 No 159E  x1	 SD M8x75 D x4	 8,5x22 E x4	 M8 F x4	 US 5x60 G x4	 φ15x2 H x4	 I	 WS M6 x 35 K x4
--	---	--	--	---	--	---	---	---	--


8

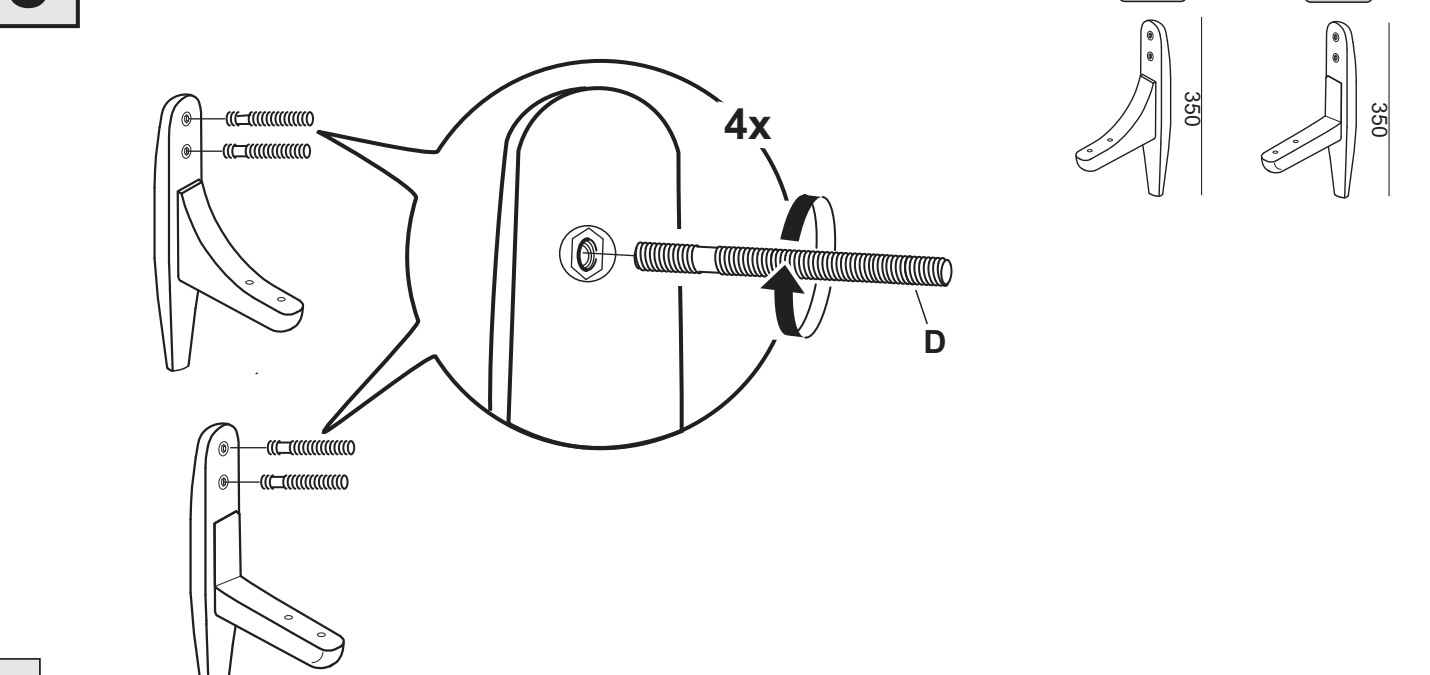

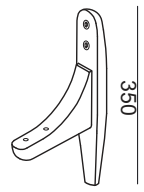
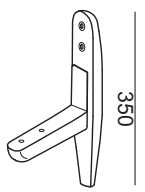
A1 + F1	 350	 350
-----------------------	--	--

4

9

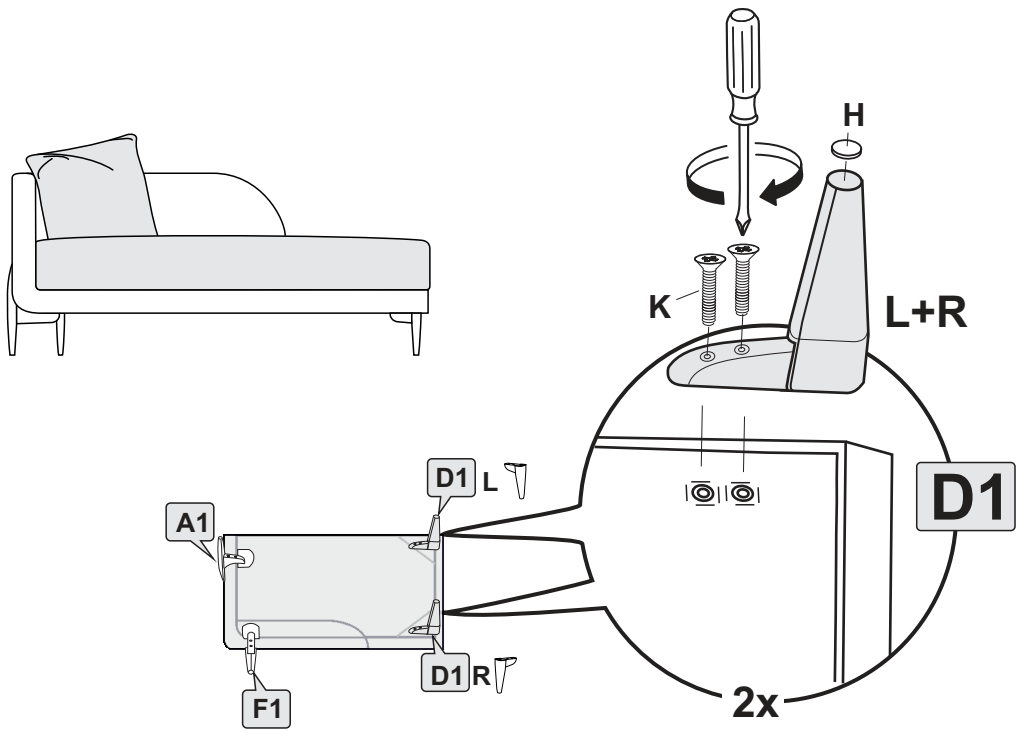

D1 No 159B

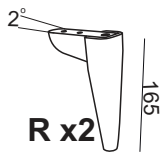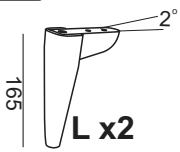

φ15x2
H x 4



WS M6 x 35
K x 8

10

